 


# Quick Reference

## Before Initial Use

 
### ■ Insert the batteries

- 1** Turn off the unit and position your thumbs on the arrows on the battery compartment cover located on the bottom of the unit. Push the cover in the direction of the arrows to remove the cover.
- 2** Insert the two attached AAA size batteries and make sure that their poles (+ and -) are correctly aligned.
- 3** Install the battery cover again.

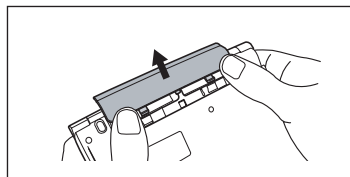


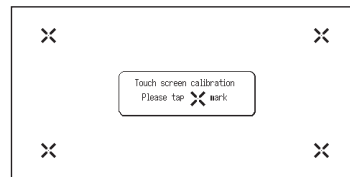 
### ■ Reset machine

- 1** Press Reset on the bottom of the unit.
- 2** Open the machine cover and adjust the display angle for the best visibility.
- 3** Use the Contrast Adjustment dial on the right side of the unit to adjust the display contrast.

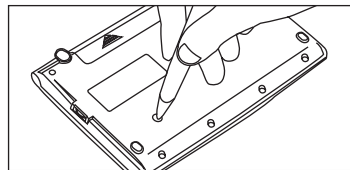













 
## ■ After loading the batteries/reset the machine







 


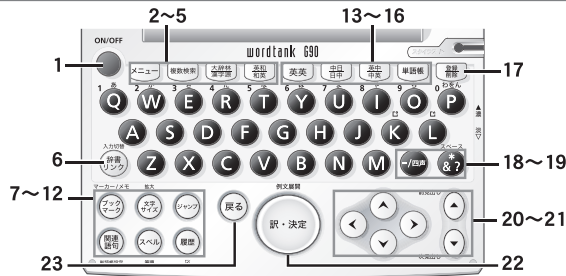

- 1** A message that reads 「タッチスクリーン補正 ✕ をスタイラスでタップしてください」(Touch screen calibration. Please tap ✕ mark) appears on the display. With the stylus pen, tap the four ✕ at the corners and then they will be disappeared.
- 2** A message that reads 「システムを初期化しますか/是否要初始化系统/Do you want to reset?」. To initialize the system, select "Yes" and press the  button.
- 3** The menu is display, and the machine is ready for use.



## Key Functions


1		On/Off Key
2		Menu Key
3		Multiple Search Key
4		Daijirin/Kanjigen Key
5		Eng-Jpn/Jpn-Eng Key
6		<ul style="list-style-type: none"> <li>Select Dictionary Link.</li> <li>Shift input method in single entry search /Memo edit screen, etc.</li> </ul>
7		<ul style="list-style-type: none"> <li>Bookmark words/phrases in main text screen.</li> <li>Underline selected items in Wordmemo.</li> <li>Create/edit Memo</li> </ul>
8		<ul style="list-style-type: none"> <li>Alter display font size</li> <li>Zoom one character</li> </ul>
9		Select word/phrases in search result screen and jump to another dictionary.
10		<ul style="list-style-type: none"> <li>Refer to common expressions, compound words, fixed expressions, phrasal verbs and idioms.</li> <li>Pull down Memo option menu.</li> </ul>
11		<ul style="list-style-type: none"> <li>Run Spell Checker in the spell input of Eng-Jpn, Eng-Eng, OXFORD Thesaurus, Eng-Chn dictionaries.</li> <li>Demonstrate stroke order of headwords in Kanjigen and Chn-Jpn, Chn-Chn dictionaries.</li> </ul>
12		<ul style="list-style-type: none"> <li>Display the previous History of searched words in the current dictionary.</li> <li>Check a tick box in Wordmemo.</li> </ul>




13		Eng-Eng key
14		Chn-Jpn/Jpn-Chn key
15		Eng-Chn/Chn-Eng key
16		Wordmemo key
17		Register/Delete key
18		<ul style="list-style-type: none"> <li>Select 4 tones in pinyin input</li> <li>Input hyphen(-)</li> </ul>
19		<ul style="list-style-type: none"> <li>Input * or ? in wild card search.</li> <li>Input &amp; to link words in example search.</li> <li>Insert space in Memo.</li> </ul>
20		Previous/Next entry headword key
21		Cursor key (screen/line scroll)
22		<ul style="list-style-type: none"> <li>Enter/Translate</li> <li>Example sentence key</li> </ul>
23		Return key





## Basic Operations


### ■ Turn power on/off

 
**1** Press the  key to turn on the unit. The screen viewed the last time will appear (resume function). In another way, press any of the following keys:         to turn on the unit. The initial screen of the chosen dictionary or related function will appear.

**2** When the screen is turned on, press  to turn off the unit. The unit itself will automatically turn off to save energy in case it has not been used for a certain period (Auto power off function).

### ■ Select items

**1** Use cursor keys     to select a dictionary in the Main Menu or to select the input field in the search screen. The chosen item will be highlighted as shown on the right.

**2** On the Main Menu, select any dictionary and press , the search screen of the chosen dictionary will appear.

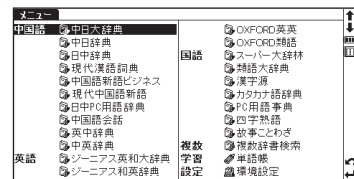

## ■ Search words/phrases/sentences

- 1 Move  $\triangleup$   $\triangledown$  to select an input field. Enter a search word or phrase with the character keys.
- 2 A list of matched words/phrases will be displayed on the left side. A preview of a chosen headword is displayed on the right side.
- 3 Move  $\triangleup$   $\triangledown$  to select the appropriate word/phrase on the list and press  $\text{Enter}$  to display the main text screen for the selected word/phrase.
  - Press  $\text{Font}$  to change the font size.

 


## ■ Scroll screen

- 1 Arrows  $\blacktriangle$  or  $\blacktriangledown$  indicate that the contents of the screen cannot be fully displayed. Press  $\triangleup$   $\triangledown$  to scroll up or down one line at a time.
- 2 In the search result list, press  $\triangleup$  (or tap  $\blacktriangle$ ) to scroll up by screen or press  $\triangledown$  (or tap  $\blacktriangledown$ ) to scroll down by screen.
- 3 In the main text screen for the searched word, press  $\rightarrow$  (or tap  $\blacktriangleright$ ) to scroll forward to the next screen or press  $\leftarrow$  (or tap  $\blacktriangleleft$ ) to scroll back to the previous screen of the text.
- 4 In the main text screen for the searched word, press  $\triangleup$  to display the previous entry or  $\triangledown$  to display the next entry.

## ■ Display example sentences or references

When **例文**, **EXAMPLE**, **LIST** or **解説** appear on the main text screen, press **例** to display example sentences, list or reference. Press **閉** again to close.

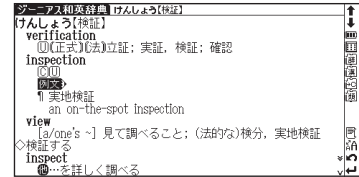

## ■ Return to search result screen

While the main text screen is displayed, press **戻る** to return to the search result screen.

## ■ See dictionary guide

- 1 When **凡例** appears on the initial search screen of any dictionary, a user guide is available.
- 2 Move **上** **下** in the search screen, select **凡例** and press **例** to refer to the guide.



Select from the selection list, enter a list or icons by tapping with the stylus pen.

 
Switch display language

At the set-up menu screen, the display language can be switched between Japanese, English and Chinese. The Set-up menu screen can be found on the Menu screen.

## Smart Icons

Various functions can be used by tapping the icons on the screen with the stylus pen.

Icons displayed up and right of screen

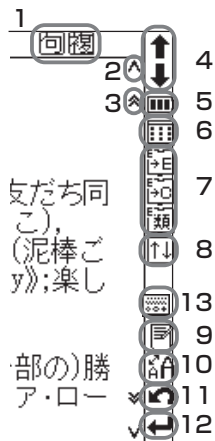

No.	Smart Icons	Description
1		Indicates that there are related words or phrases.
2		Tap to display the previous or next line of text that could not be displayed in the current screen.
3		Tap to display the previous or next screen of text that could not be displayed in the current screen.
4		Tap to display the search result screen for the previous or next entry.
5		Indicates the amount of power remaining in the batteries. As the power remaining in the batteries becomes low, fewer segments are displayed in the icon.
6		Tap to display the menu screen.
7		These icons indicate that the currently displayed entry word is also listed in other dictionaries. Tap the icon to jump to the corresponding dictionary.
8		Tap to display the icons that could not be displayed in the current screen.
9		Tap to display the history of dictionaries and modes that were displayed.
10		Tap to change the size of the characters displayed in the screens.
11		Tap to display the previous screen.
12		Tap to perform the same operation as if the key is pressed, for example, selecting
13		Tap to display the Virtual Keyboard.

Icon displayed in text screen



When any of the above icons appear in the search result screen, example sentences, references or lists for the entry word can be displayed.

## Dictionary link icons

These icons indicate that the currently displayed entry word is also listed in other dictionaries. Tap the icon to jump to the corresponding dictionary.



The icons displayed on the screen represent each dictionary as follows:

- |   |                       |                    |
|---|-----------------------|--------------------|
| Super Daijirin/Super Daijirin abbreviation search       | Jpn Thesaurus         | Kanjigen           |
| Concise Katakana / Concise Katakana abbreviation search | PC Encyclopedia       | Four-Kanji Phrases |
| Proverbs & Sayings                                      | Genius Eng-Jpn        | Genius             |
| OXFORD Eng-Eng  | OXFORD Thesaurus      | Advanced Chn-Jpn   |
| Chn-Jpn   | Jpn-Chn               | XianDai Chn-Chn    |
| Chn Business New Terms                                  | XianDai Chn New Terms | Jpn<->Chn PC       |
| Eng-Chn   | Chn-Eng               |                    |

## How to search (e.g. using the Chinese-Japanese Dictionary)

With the Chinese-Japanese dictionary, you can conduct a search using pinyin (Chinese pronunciation), Chinese characters, Japanese pronunciations, the radical stroke count or the total stroke count. You can also search by writing the character.

### ■ Search a Chinese word by pinyin

**1** When entering pinyin, press  to select appropriate tone. (After inputting the pinyin, press  to change the tone symbols; - <first tone>, ´ <second tone>, ˇ <third tone>, ` <fourth tone>, or ˙ <neutral tone>. The tone options will be different depending on the pinyin letter inputted. The unavaible tone will be skipped in selection.

e.g.) When searching "旅行" (lǚ xíng), key in as below. (For pinyin letter "ü", use "v" to entry instead.)

 
          


### ■ Search by writing





**1** Write a character carefully in the writing recognition box with the stylus pen.

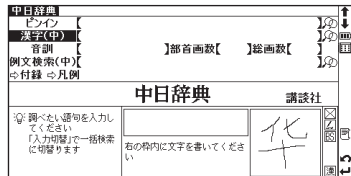**2** Candidate characters will be shown in the candidate box. Select the appropriate character and tap it with the stylus pen.



- \* The writing recognition box can only handle one character at a time.
- \* Compound words can only be entered one by one.



Tap  to display the virtual keyboard. Tap  on the right side of the keyboard to open the writing recognition box. To return to the virtual keyboard screen, tap .



In the writing recognition box, the input method can be switched by tapping  (Japanese Hiragana and Japanese Katakana),  alphabet (uppercase and lowercase),  (Japanese Kanji and Chinese character) or  (numerical).

## Use the Wordmemo



**1** Register headwords  
 In the main text screen for dictionaries, press  to copy the word into the Wordmemo. Press  to see the list of headwords previously registered.

 
 
**2** Organize the headwords by category  
 From the Wordmemo list, registered headwords can be categorized.

Press  to return to the previous main text screen.





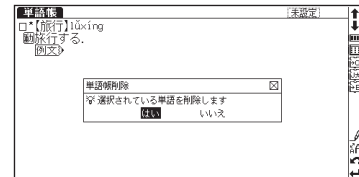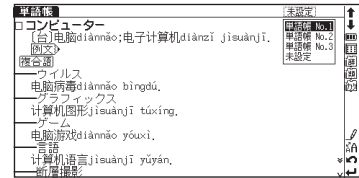


In the main screen of the Wordmemo, press  to pull down the category menu. Select an appropriate category option (Wordmemo 1, Wordmemo 2, Wordmemo 3, Not defined) and press  to assign the current headword to the category.







**3** Delete Wordmemo data




In the main screen of the Wordmemo, press . When the message "単語帳から削除しますか" (Delete headwords from Wordmemo) appears, select "はい" (Yes) and press  to confirm the deletion.

 
 


## Use the Multi Jump function

**1** In the main text screen of any dictionary, press  and use     to select the word you wish to search in another dictionary. If it is a phrase, press  again and press  to expand the selection block.

**2** Press  to display destinations. Use     to select the appropriate dictionary and press  to jump to the destination.

- \* If there is only one jump target, the jump will be directly executed.
- \* If  is shown in the main text screen, use Jump function to select . Press  to see the reference.

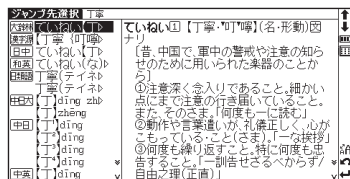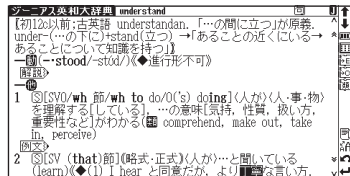

## Use Wild Card Search




 

 







**1** In Japanese, English spelling or Chinese pinyin input, "?" and "\*" can be used as uncertain letter(s). If "\*" is entered at the start followed by letters, Reversed Search can be used.

While "?" represents one character, "\*" has no restriction.

**2** For example, entering "chr \* m" in English can provide the search result "chrism, chrysanthemum..etc" (headwords that start with "chr" and end by "m").




 



Inputting "piny?n" in Chinese pinyin can provide the search result "【拼音】pinyin" (headwords that start with "piny" and end by "n").

## Use the Bookmark function

- 1 In the main text screen of any dictionary, press  and select "ブックマークリストに追加" (Add to Bookmark) option, then press  to add the current headword to the Bookmark.
- 2 In the initial search screen and main text screen of any dictionary, press  to display the Bookmark headword list (for the current dictionary). Use     to select a headword listed, then press  to display the main text screen for the word.
- 3 In the Bookmark headword list, Use     to select a headword listed, then press  to remove the headword.














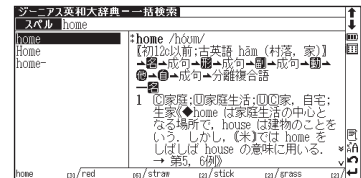 
## Use the History function

- 1 In the initial search screen and main text screen of any dictionary, press  to display the History of headwords previously searched in the current dictionary.
- 2 Use     to select any headword listed, press  to display the main text screen for the word. Press  to remove the word from History.
- 3 If the main text screen is accessed by the History function, the previous and next headwords key will correspond to the headwords in the History list, instead of the headwords order in the original dictionary.




 





## Use the Multi-Key Search function

- In the initial search screen of any dictionary and the Multiple Dictionary Search, plural keywords can be entered. If  appears next to input fields, press  or tap  with the stylus to display the Multi-Key Search screen.
- Up to 5 entries can be entered at a time. The restriction of the original input method will be applied in the Multi-Key Search. The number of matched results for the word completely inputted will be shown at the end of the input field when the cursor is moved to other field by pressing  .
- While the input field or **検索開始** is highlighted, press  to start a search. Press **クリア** and  to reset the entry. Press  or tap  with the stylus to return to the single entry search screen.
- In the search result screen, each matched word will provide its own list. Press   to shift among different result lists.





**7** In the main text screen of any dictionary, press  twice and  to display Memo Management screen. Use   to select an appropriate group and press  to confirm. The list of Memos with the selected group will be displayed.

**8** When the Memo Management screen is displayed, select an appropriate Memo and press  to modify . Press  to close the Memo screen.

